

# Husqvarna®




QC330, QC500

EN	Operator's manual	2-9	LT	Operatoriaus vadovas	137-144
AR	دليل المشغل	10-16	LV	Lietošanas pamācība	145-153
BG	Ръководство за експлоатация	17-25	MS	Panduan Pengguna	154-162
CS	Návod k použití	26-33	NL	Gebruiksaanwijzing	163-171
DA	Brugsanvisning	34-41	NO	Bruksanvisning	172-179
DE	Bedienungsanweisung	42-52	PL	Instrukcja obsługi	180-188
EL	Οδηγίες Χρήσης	53-62	PT	Manual do utilizador	189-197
ES	Manual de usuario	63-71	RO	Instrucțiuni de utilizare	198-206
ET	Kasutusjuhend	72-79	RU	Руководство по эксплуатации	207-216
FI	Käyttöohje	80-87	SK	Návod na obsluhu	217-224
FR	Manuel d'utilisation	88-96	SL	Navodila za uporabo	225-232
HR	Priručnik za korištenje	97-104	SR	Priručnik za rukovaoca	233-241
HU	Használati utasítás	105-113	SV	Bruksanvisning	242-249
IT	Manuale dell'operatore	114-121	TR	Kullanım kılavuzu	250-257
JA	取扱説明書	122-129	UK	Посібник користувача	258-266
KO	사용자 설명서	130-136	ZH	操作手册	267-272



# PRODUCT OVERVIEW

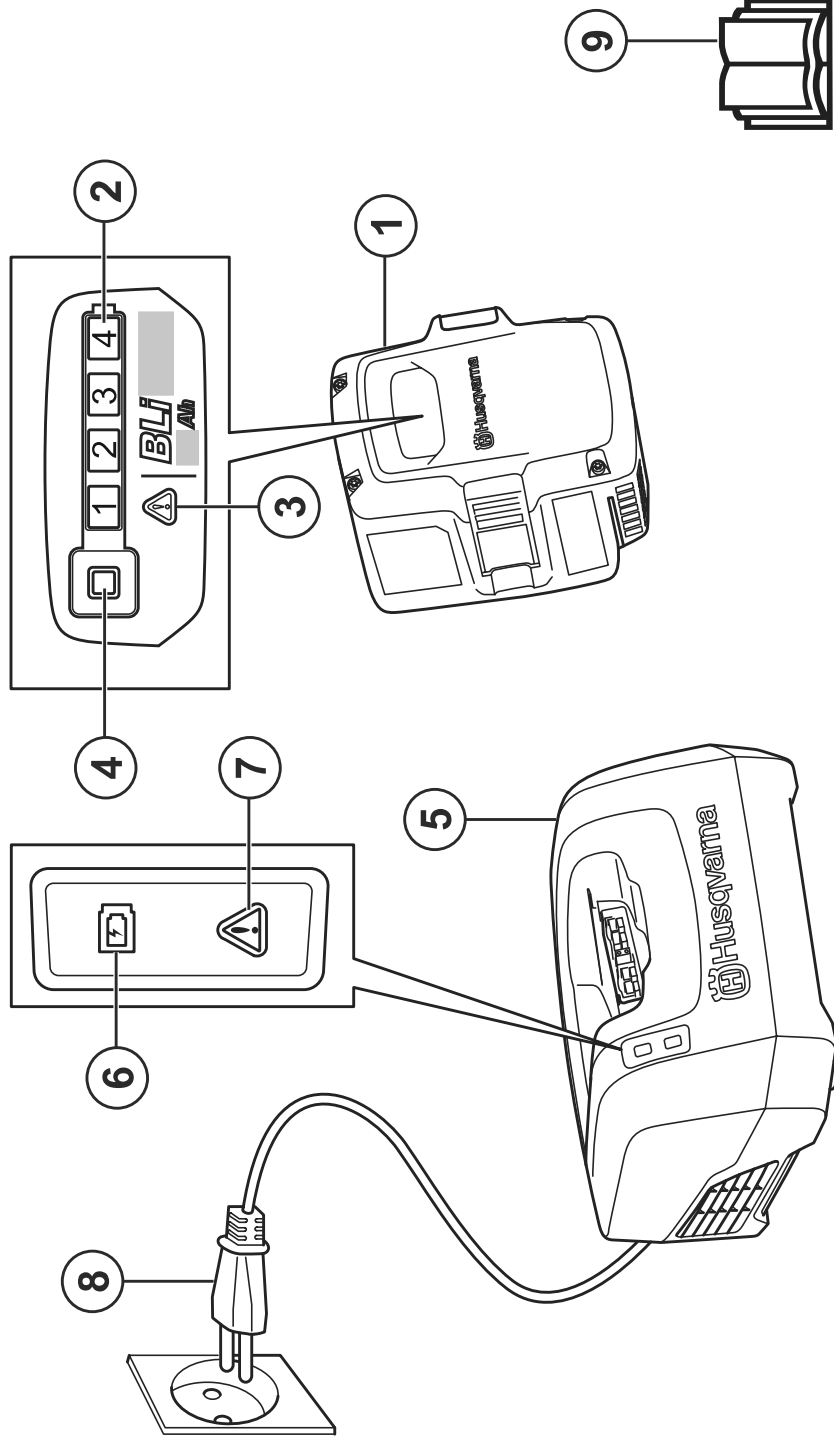

1. Battery


2. LED indicator for the state of charge

3. Warning LED
4. Battery indicator button
5. Battery charger
6. Charging LED
7. Error LED
8. Power plug
9. Operator's manual

## SYMBOLS ON THE PRODUCT



Be careful and use the product correctly. This product can cause serious injury or death to the operator or others.

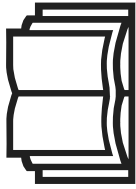


Read the operator's manual carefully and make sure that you understand the instructions before use.



The product agrees with the applicable EC directives.




This product conforms to applicable UK regulations.

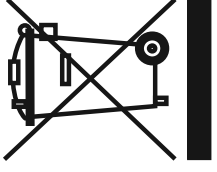

The product or package of the product is not domestic waste. Recycle it at an applicable disposal location for electrical and electronic equipment.



Keep the unit away from water and rain.

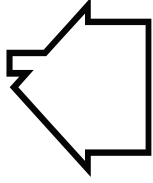

Use and keep the battery charger indoors only.

---

**Note:** Other symbols/decals on the product refer to certification requirements for some commercial areas.

---

## SAFETY DEFINITIONS

Warnings, cautions and notes are used to point out specially important parts of the manual.



**WARNING:** Used if there is a risk of injury or death for the operator or bystanders if the instructions in the manual are not obeyed.

**Note:** Used to give more information that is necessary in a given situation.

## **IMPORTANT SAFETY INSTRUCTIONS**



**CAUTION:** Used if there is a risk of damage to the product, other materials or the adjacent area if the instructions in the manual are not obeyed.



**WARNING:** Read all safety warnings and all instructions. Failure to obey the warnings and instructions may result in

electrical shock, fire and/or serious injury.

---

- Only use the battery chargers, QC330 or QC500 to charge Husqvarna original batteries. The batteries are software encrypted.
- Do not use non-rechargeable batteries.
- Do not try to disassemble or repair the battery charger.
- Do not connect the battery charger terminals to metal objects.
- The charger is using a C17 standard sheet cord set.
- Use an approved grounded mains socket that is not damaged.
- Regularly examine that the power cord is not damaged. Immediately disconnect the battery charger if the power cord is damaged.
- If the power cord is damaged, let an approved service agent replace the power cord.
- Do not lift the battery charger by the power cord. To disconnect the battery charger from a

- mains socket, pull out the power plug. Do not pull the power cord.
- Keep all cables and extension leads away from water, oil and sharp edges. Make sure that the power cord is not caught between doors, fences or equivalent.
- Do not clean the battery or the battery charger with water.
- Keep the battery charger away from children.
- Do not use a defective or damaged battery charger or battery.
- Do not use the battery charger when there is a risk of lightning.
- Only use the battery charger indoors in an environment with good airflow and the correct temperature.
- Keep the battery charger away from sunlight. Do not use the battery charger outdoors or in wet conditions.
- Do not operate the battery charger with wet hands.
- Do not use the battery charger near flammable materials or materials that can cause corrosion. Pull out the power

plug to the battery charger if there is smoke or fire.

- Do not put a cover on the battery charger during operation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the

appliance. Cleaning and user maintenance shall not be made by children without supervision.

## OPERATION

- Use the battery charger only when the ambient temperature is between 5 °C (41 °F) and 40 °C (104 °F).

## To charge the battery



**CAUTION:** Make sure that the battery, the battery charger and the terminals on the battery are clean and dry. Do not put the battery in the battery charger if it is dirty or wet.

1. Connect the battery charger to a power outlet. The charging LED flashes 1 time.



**CAUTION:** Only connect the battery charger to a power outlet with the voltage and frequency specified on the rating plate.

2. Connect the battery to the battery charger. The charging LED comes on.
3. Remove the battery from the battery charger when it is fully charged. Push the battery indicator button for battery status. When all the LED indicators come on, the battery is fully charged.

4. Pull the power plug to disconnect the battery charger from the power outlet. Do not pull the power cord.

## TROUBLESHOOTING

Condition	Possible faults	Possible procedure
The charging LED flashes green.	Temperature deviation, the battery is too cold or too hot to use or charge.	Let the battery cool down or warm it up. When the battery has the correct temperature, it can be used or charged again. Use the battery charger in ambient temperatures between 5 °C (41 °F) and 40 °C (104 °F).
The charging LED is red.	Permanent battery charger error.	Speak to your dealer.
The charging LED flashes red.	Defective battery.	Speak to your dealer.

## TRANSPORTATION AND STORAGE

- Safely attach the product during transportation to prevent damage and accidents.
- Keep the product in a locked area to prevent access for children or persons that are not approved.
- Put the product in a dry, frost-free and clean space with correct temperature.



- Put the product in storage where the temperature is between 5 °C (41 °F) and 25 °C (77 °F). Keep the product away from sunlight.
- Keep the battery away from the battery charger during storage.

## **DISPOSAL**

Husqvarna products are not domestic waste and must only be discarded as given in this manual.

- Obey the local disposal requirements and applicable regulations.
- Recycle the battery charger and package at an applicable disposal location.
- Speak to your local Husqvarna dealer for more information on how to recycle and discard the battery.

## **TECHNICAL DATA**

For technical data, refer to the rating plate of the battery charger.